Kinetis_V_0N86P Rev. 16 OCT 2015

Mask Set Errata for Mask 0N86P

This report applies to mask 0N86P for these products:

- MKV58F1M0VLL20
- MKV58F1M0VLQ20
- MKV58F512CLL22
- MKV58F1M0CLL22
- MKV58F1M0CLQ22
- MKV58F1M0CMD22
- MKV58F512CLQ22
- MKV58F512CMD22
- MKV58F512VLL20
- MKV58F512VLQ20
- MKV56F1M0CLL22
- MKV56F1M0CLQ22
- MKV56F1M0CMD22
- MKV56F1M0VLL20
- MKV56F1M0VLQ20
- MKV56F512CLL22
- MKV56F512CLQ22MKV56F512CMD22
- MKV56F512VLL20
- MKV56F512VLQ20

Table 1. Errata and Information Summary

Erratum ID	Erratum Title
e9588	Core: Incorrect behavior of profiling counters
e9586	Core: Lock Status Indication incorrectly reads as one for debugger reads
e9587	Core: TPIU cannot be flushed in Debug state if Cortex-M7 TPIU is used
e8341	FlexCAN: Entering Freeze Mode or Low Power Mode from Normal Mode can cause the FlexCAN module to stop operating.
e9265	FTM: Incorrect match may be generated if intermediate load feature is used in toggle mode
e9766	HSADC: Unexpected leakage from CH1 pins when a non-zero voltage is applied to the CH1 pins
e7735	MCG: IREFST status bit may set before the IREFS multiplexor switches the FLL reference clock

Table continues on the next page...





Table 1. Errata and Information Summary (continued)

Erratum ID	Erratum Title
e9643	PDB: Unable to correctly trigger multiple HSADC conversions when using the pause feature of the HSADC Scan Control Register
e4647	UART: Flow control timing issue can result in loss of characters if FIFO is not enabled

Table 2. Revision History

Revision	Changes
16 OCT 2015	Initial revision

Core: Incorrect behavior of profiling counters e9588:

Description: ARM Errata 850724: The profiling counters are provided to enable non-intrusive counting of events with limited accuracy. Due to this erratum, some events update the wrong event counter.

> The DWT LSUCNT counter should be incremented for all extra cycles that the processor spends executing normal load-store instructions. Because of this erratum, stall cycles in the memory system will cause the DWT_CPICNT to be incremented instead of the DWT_LSUCNT. The DWT_LSUCNT will only count non-stalled extra cycles spent handling load-store instructions.

The DWT EXCCNT counter should be incremented whilst lazy VFP state preservation is being performed.

Because of this erratum, these cycles increment the DWT LSUCNT counter and, on stall cycles, the DWT_CPICNT instead.

Note that no cycles are missed entirely or double counted. This erratum only means that the cycles are counted in the wrong counter.

The following conditions are required to hit this erratum:

- The DEMCR.TRCENA bit is set
- · Any or all of the following bits are set:
- · DWT CTRL.LSUEVTENA to enable the DWT LSUCNT counter
- DWT_CTRL.CPICNT to enable the DWT_CPICNT counter

This erratum results in incorrect values in the profiling counters.

It has no other functional impact.

Workaround: There is no workaround for this erratum.



e9586: Core: Lock Status Indication incorrectly reads as one for debugger reads

Description: ARM Errata 851031: The FPB, DWT, and ITM components each implement a CoreSight lock mechanism. This lock is intended to prevent accidental software writes to control registers and is not required for external debugger accesses.

For an external debugger:

- · LSR.LSI should RAZ to show that the lock is not implemented.
- · LSR.SLK should RAZ to show that the component is not locked.

Because of this erratum, the LSR.LSI bit incorrectly reads as one for debugger accesses. An external debugger reading the LSR might be misled by the incorrect LSR.LSI value and attempt to obtain the lock. If the debugger polls until LSR.SLK reads as one, then the debugger could livelock. If the debugger does not poll on LSR.SLK, and instead assumes it has the lock and carries on, then there are no implications of this erratum.

Workaround: External debuggers should ignore the SLI field of the FPB_LSR, DWT_LSR and ITM_LSR registers. External tools should not attempt to lock or unlock the lock by writing to FPB_LAR, DWT_LAR and ITM_LAR registers.

e9587: Core: TPIU cannot be flushed in Debug state if Cortex-M7 TPIU is used

Description: ARM Errata 850725: The Cortex-M7 TPIU requires a DSYNC to flush any trace data that does not form a full frame and to allow trace synchronization.

A write to the DWT_CYCCNT register in the DWT is specified to generate this DSYNC to the Cortex-M7 TPIU.

This mechanism provides a means to flush out any buffered trace data in the TPIU.

Because of this erratum, a write to the DWT_CYCCNT register does not generate this DSYNC.

This erratum can cause the loss of the final bytes in a trace session. This applies to a maximum of 14 bytes. Additionally, it leaves an external debugger with no way to flush out any buffered trace data. This affects the standard step and trace model such that data generated during a step event will not be visible until a subsequent entry into halt mode.

Workaround: The DSYNC signal can be manually triggered, under the same conditions as the disabled method, by causing the processor to leave halted state and then halting the processor a second time.

e8341: FlexCAN: Entering Freeze Mode or Low Power Mode from Normal Mode can cause the FlexCAN module to stop operating.

Description: In the Flexible Controller Area Network (FlexCAN) module, if the Freeze Enable bit (FRZ) in the Module Configuration Register (MCR) is asserted and the Freeze Mode is requested by asserting the Halt bit (HALT) in MCR, in some cases, the Freeze Mode Acknowledge bit (FRZACK) in the MCR may never be asserted.

In addition, the Low-Power Mode Acknowledge bit (LPMACK) in the MCR may never be asserted in some cases when the Low-Power Mode is requested.

Under the two scenarios described above, the loss of ACK assertion (FRZACK, LPMACK) causes a lock condition. A soft reset action is required in order to remove the lock condition.

Mask Set Errata for Mask 0N86P, Rev. 16 OCT 2015



The change from Normal Mode to Low-Power Mode cannot be done directly. Instead, first change mode from Normal to Freeze Mode, and then from Freeze to Low-Power Mode.

Workaround: To avoid the lock condition, the following procedures must be used:

- A) Procedure to enter in Freeze Mode:
- 1. Set both the Freeze Enable bit (FRZ) and the Halt bit (HALT) in the Module Control Register (MCR).
- 2. Check if the Module Disable bit (MDIS) in MCR register is set. If yes, clear the MDIS bit.
- 3. Poll the MCR register until the Freeze Mode Acknowledge bit (FRZACK) in MCR is set or the timeout is reached (see NOTE below).
- 4. If the Freeze Mode Acknowledge bit (FRZACK) is set, no further action is required. Skip steps 5 to 8.
- 5. If the timeout is reached because the Freeze Mode Acknowledge bit (FRZACK) is still cleared, then set the Soft Reset bit (SOFTRST) in MCR.
- Poll the MCR register until the Soft Reset bit (SOFTRST) bit is cleared.
- 7. Reconfigure the Module Control Register (MCR)
- 8. Reconfigure all the Interrupt Mask Registers (IMASKn).

After Step 8, the module will be in Freeze Mode.

NOTE: The minimum timeout duration must be equivalent to:

- a) 730 CAN bits if the CAN FD Operation Enable bit (FDEN) in MCR is set (CAN bits calculated at arbitration bit rate),
- b) 180 CAN bits if the FDEN bit is cleared.
- B) Procedure to enter in Low-Power Mode:
- 1. Enter in Freeze Mode (execute the procedure A).
- 2. Request the Low-Power Mode.
- 3. Poll the MCR register until the Low-Power Mode Acknowledge (LPMACK) bit in MCR is set.

e9265: FTM: Incorrect match may be generated if intermediate load feature is used in toggle mode

Description: When a channel (n) match is used as an intermediate reload, an incorrect second match may occur immediately following the correct match. The issue is problematic only if channel (n) is configured for output compare with the output configured to toggle mode. In this scenario, channel (n) toggles on the correct match and again on the incorrect match. The issue may also occur if a certain channel has a match which is coincident with an intermediate reload point of any other channel.

Workaround: If any channel is configured for output compare mode with the output set for toggle mode, the intermediate reload feature must not be used.



e9766: HSADC: Unexpected leakage from CH1 pins when a non-zero voltage is applied to the CH1 pins

Description: When an HSADC instance is disabled, applying a non-zero voltage causes extra leakage to be

observed on the pins. This occurs only on the HSADCx CH1 pins. All other pins are

unaffected.

Workaround: There is only one workaround for this errata. Do not apply a voltage above 0V to the

HSADCx_CH1 pins when the HSADCx module is not enabled and configured.

e7735: MCG: IREFST status bit may set before the IREFS multiplexor switches the FLL reference clock

Description: When transitioning from MCG clock modes FBE or FEE to either FBI or FEI, the

MCG_S[IREFST] bit will set to 1 before the IREFS clock multiplexor has actually selected the slow IRC as the reference clock. The delay before the multiplexor actually switches is:

2 cycles of the slow IRC + 2 cycles of OSCERCLK

In the majority of cases this has no effect on the operation of the device.

Workaround: In the majority of applications no workaround is required. If there is a requirement to know when the IREFS clock multiplexor has actually switched, and OSCERCLK is no longer being

used by the FLL, then wait the equivalent time of:

2 cycles of the slow IRC + 2 cycles of OSCERCLK

after MCG_S[IREFST] has been set to 1.

e9643: PDB: Unable to correctly trigger multiple HSADC conversions when using the pause feature of the HSADC Scan Control Register

Description: With the PDB configured in any mode, and the HSADC configured for SYNC input pulse initiated scans, the PDB is unable to trigger multiple scans when the pause feature is also used. More specifically, the HSADC configuration would be as follows:

- 1. SDIS < 0xFFFE, to sample multiple channels
- 2. SCTRL configured to wait for PDB input sync pulse after each or any one of the samples (other than the first sample in the list)
- 3. SYNCA = 1 or SYNCB = 1 to enable the SYNC input
- 4. HSADC SYNC trigger configured to the PDB via either the SIM_SOPT7 register or the XBARA register setting (XBARA_SEL6[SEL12] or XBARA_SEL21[SEL42] for HSADCxA triggers or XBARA_SEL6[SEL13] or XBARA_SEL21[SEL43] for HSADCxB triggers.

In this condition, the PDB will initiate the scan, but the scan will stop at the first sample disabled by the Scan Control Register and no more samples will be initiated. The PDB may continue running (depending on the PDB settings) but it will not issue any triggers.

Workaround: There are multiple possible workarounds for this errata.

1. Use the eFlexPWM, FTM, or PIT to trigger the HSADC samples.



- 2. Disable, then re-enable the PDB (via either the M7 core or the DMA) once the trigger has occurred. If the pre-trigger functionality is being used, the channel flag may be used to determine when to restart the PDB. If the interrupt is being used, the interrupt service routine or interrupt flag (SC[PDBIF]) may be used. If the pre-trigger is being bypassed, it is recommended to use the interrupt service routine or interrupt flag to determine when to restart the PDB.
- 3. Do not use the pause feature via the Scan Control Register. In implementing this workaround, the application should be written such that the samples are processed or stored after each scan.

UART: Flow control timing issue can result in loss of characters if FIFO is not e4647: enabled

Description: On UARTx modules with FIFO depths greater than 1, when the /RTS flow control signal is used in receiver request-to-send mode, the /RTS signal is negated if the number of characters in the Receive FIFO is equal to or greater than the receive watermark. The /RTS signal will not negate until after the last character (the one that makes the condition for /RTS negation true) is completely received and recognized. This creates a delay between the end of the STOP bit and the negation of the /RTS signal. In some cases this delay can be long enough that a transmitter will start transmission of another character before it has a chance to recognize the negation of the /RTS signal (the /CTS input to the transmitter).

Workaround: Always enable the RxFIFO if you are using flow control for UARTx modules with FIFO depths greater than 1. The receive watermark should be set to seven or less. This will ensure that there is space for at least one more character in the FIFO when /RTS negates. So in this case no data would be lost.

> Note that only UARTx modules with FIFO depths greater than 1 are affected. The UARTs that do not have the RxFIFO feature are not affected. Check the Reference Manual for your device to determine the FIFO depths that are implemented on the UARTx modules for your device.



How to Reach Us:

Home Page: freescale.com

Web Support:

freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: freescale.com/SalesTermsandConditions.

Freescale, the Freescale logo, and Kinetis are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. ARM, the ARM Power logo, and Cortex are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/ or elsewhere. All rights reserved.

© 2015 Freescale Semiconductor, Inc.

Document Number: Kinetis_V_0N86P

Rev. 16OCT2015



